

2.9 Failure indication

A. Failure indication for outdoor unit:

The red light will flash when there is any failure happened. Otherwise, no red light is on.

The green light will be on when outdoor unit is with electricity.

B. Failure indication for indoor unit:

1. Indoor EEPROM on PCB failure---EE
2. PG motor failure---F0
3. Indoor pipe coil temperature sensor failure---F3
4. Indoor temperature sensor failure---F1
5. PG motor Zero crossing detection anomaly-E1
6. Outdoor system anomaly-E8
7. Outdoor EEPROM on PCB failure---EF
8. Indoor communications can not be accepted---F6
9. Outdoor unit and IPDU communications failure---F8
10. Compressor failure --E4/E3
11. IPM module malfunction---F9
12. Exhausting temperature sensor failure---F5
13. Induction temperature sensor failure---E5
14. Outdoor pipe coil temperature sensor failure---F4
15. Outdoor temperature sensor failure---F2
16. Outdoor DC motor failure---E2